

HEAD ASSEMBLY / İÇ TÜP BAŞLIĞI

	DESCRIPTION	AÇIKLAMA
1	SPEARHEAD POINT	ÇAMBAŞI
2	COMPRESSION SPRING	YAY
3	DETENT PLUNGER	ÇAMBAŞI SUSTASI
4	SPEARHEAD BASE	ÇAMBAŞI ALTI
5	SPIROL PIN	PİM
6	LATCH RETRACTING CASE	MANDAL MUHAFAZASI
7	SPRING PIN	PİM
8	BOLT	CİVATA
9	WASHER	PUL
10	COMPRESSION SPRING	YAY
11	UPPER LATCH BODY	MANDAL GÖVDESİ
12	LATCH	MANDAL
13	LINK	MANDAL BAĞLANTISI
14	SPRING PIN	PİM
15	BALL	MİSKET
16	SPRING PIN	PİM
17	LATCH INDICATOR BUSHING	MİSKET YUVASI
18	ADAPTER	ADAPTÖR
19	SEAL	KEÇE
20	SEAL SEAT	KEÇE YATAĞI
21	LANDING SHOULDER	DURDURUCU BİLEZİK
22	LOWER LACH BODY	ALT GÖVDE
23	LOCKING NUT	SOMUN
24	SPINDLE	BAŞLIK MİLİ
25	SHUT-OFF VALVE	LASTİK
26	VALVE ADJUSTING WASHER	PUL
27	THRUST BEARING	BASKI RULMANI
28	SPINDLE BUSHING	BAŞLIK SOMUNU
29	THRUST BEARING	BASKI RULMANI
30	COMPRESSION SPRING	BASKI YAYI
31	LOCKING NUT	KİLİTLİ SOMUN
32	INNER - TUBE CAP	BAŞLIK
33	GREASE FITTING	GRESÖRLÜK
34	BALL	MİSKET
35	CHECK VALVE BODY	BAŞLIK KEPİ

